


РАЗМЕРЫ ФЛАНЦЕВ




DN	D	M	G	максимальная толщина
32	140	100	78	18
40	150	110	88	18
50	165	125	102	20
65	185	145	122	20

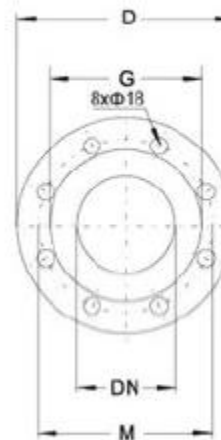

DN	D	M	G	максимальная толщина
80	200	160	138	22
100	220	180	158	24

СХЕМА УСТАНОВКИ


(для насосов с мощностью двигателя по 7,5 кВт включительно)

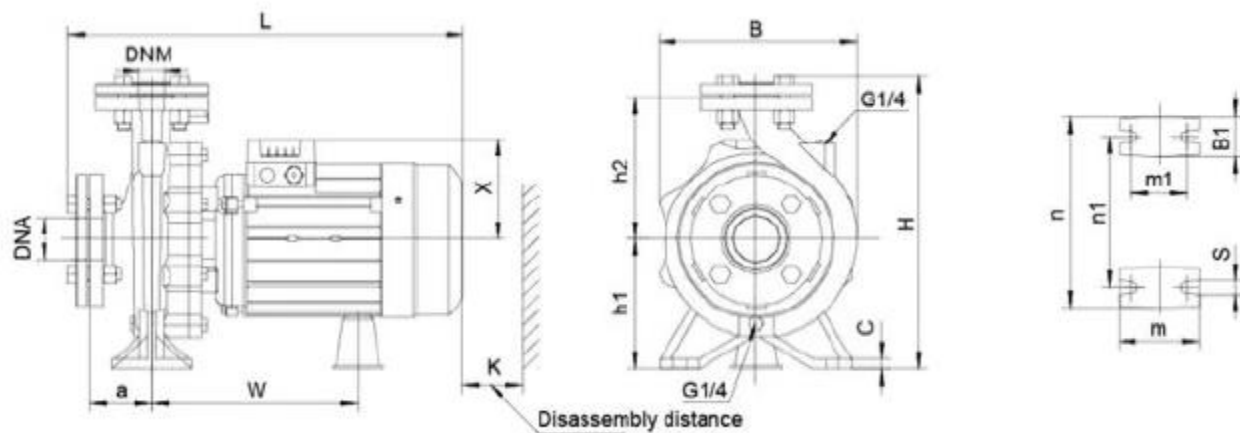

Модель	DNM	DNA	a	h2	w	x	B1	c	h1	m	m1	n	n1	s	B	H	L	K			
XST50-125/22	50	65	100	170	262	127	52	12	132	100	70	240	190	15	245	329	517	110			
XSTm50-125/22						141															
XST50-125/30						127															
XST50-125/40						127															
XST50-160/55			180	266	179				160			262	212		271	367	567				
XST50-160/75																	589				

СХЕМА УСТАНОВКИ

(для насосов с мощностью двигателя выше 7,5 кВт)

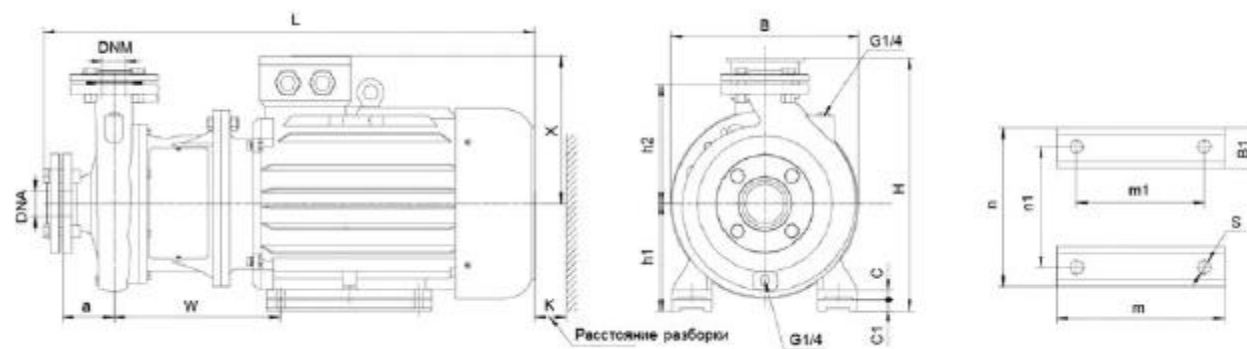

Модель	DNM	DNA	a	h2	w	x	B1	C	C1	h1	m	m1	n	n1	s	B	H	L	K				
XST50-200/92	50	65	100	220	310	255	65	20	-	160	260	210	314	254	14,5	350	425	838	120				
XST50-200/110									20	180							304		254	445	882	110	
XST50-250/150				225	323	280	70	22			-	311	241	349				279		465			923
XST50-250/185																							
XST50-250/220																							