


РАЗМЕРЫ ФЛАНЦЕВ




DN	D	M	G	максимальная толщина
32	140	100	78	18
40	150	110	88	18
50	165	125	102	20
65	185	145	122	20

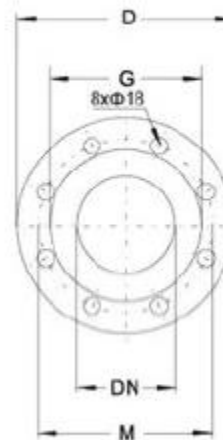

DN	D	M	G	максимальная толщина
80	200	160	138	22
100	220	180	158	24

СХЕМА УСТАНОВКИ


(для насосов с мощностью двигателя по 7,5 кВт включительно)

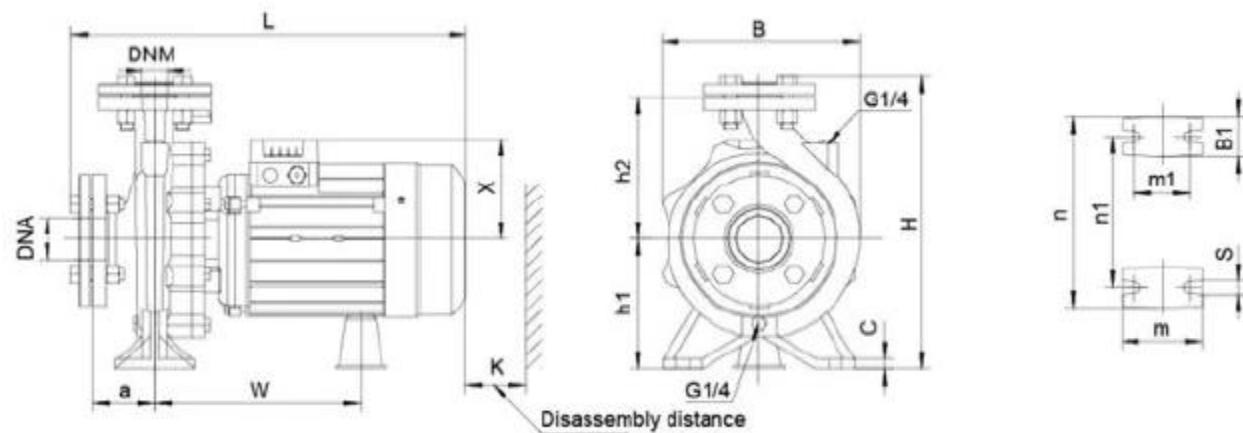

Модель	DNM	DNA	a	h2	w	x	B1	c	h1	m	m1	n	n1	s	B	H	L	K
XST65-125/40	65	80	100	180	276	179	68	14	160	125	95	280	212	15	282	371	577	110
XST65-125/55																	600	
XST65-125/75																	600	

СХЕМА УСТАНОВКИ

(для насосов с мощностью двигателя выше 7,5 кВт)

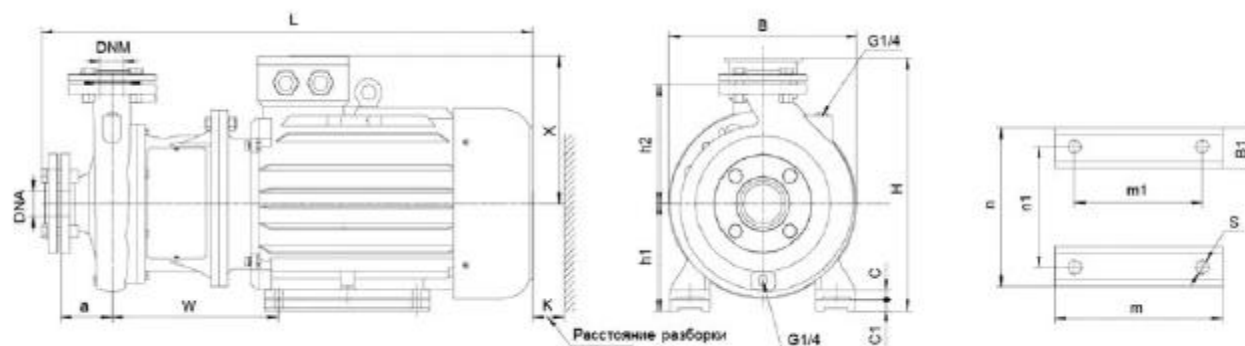

Модель	DNM	DNA	a	h2	w	x	B1	C	C1	h1	m	m1	n	n1	s	B	H	L	K													
XST65-160/92	65	80	100	200	312	255	65	20	-	160	260	210	314	254	14,5	350	425	840	125													
XST65-160/110																																
XST65-160/150																																
XST65-200/150				225	310	280	70	22	20	180	304	254	349	279			355	465		923												
XST65-200/185																																
XST65-200/220																																
XST65-200K/185				225	337	255	65	20	20	180	304	254	314	254	350	909	909															
XST65-200K/220																		350		280	70	22	311	241	349	279	465	950				
XST65-200K/300																													362	305		25
XST65-250/220				250	353	280		22	-	180	311	241	349	279	14,5	350	465															
XST65-250/300																		365		305		25	200	368	305	388	318	18,5				
XST65-250/370																																